




## Wrapping an Edge to Edge


- Press **Design**.
- Press **File**.
- Press **Open**.
- Double tap on:




- **Designs/HQ Designs/ Continuous Line/Baptist Fan**
- Press **Area**.
- Move machine to the top left corner of quilt top.
- Press **2 Corner**.
- Move machine to right side of quilt.
- Press **2 Corner**.
- Type in the height of the quilt since the machine cannot reach the bottom of the quilt.

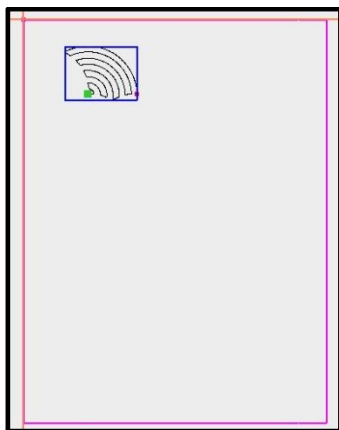


- Press **Repeat**.
- Press **Main**.

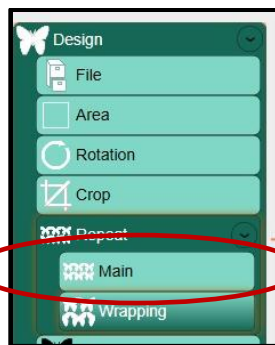


- Press **Fit**.
- Press **Point 2 Point**.
- Using the “+” add more **Horizontal** and **Vertical** repeats until the design is larger than the area.

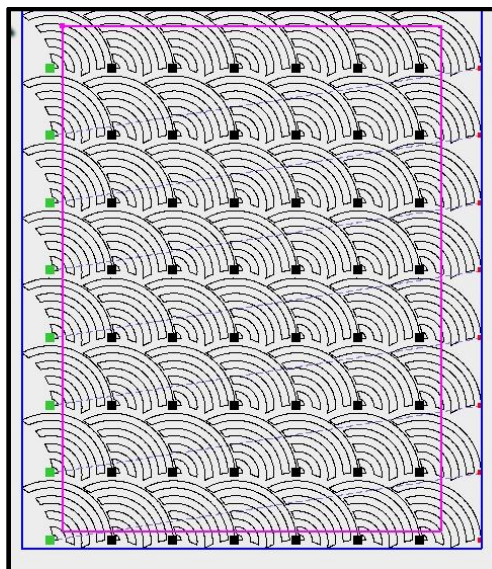

- Adjust the **Distance** between the rows by pressing the “-” button to decrease the distance.

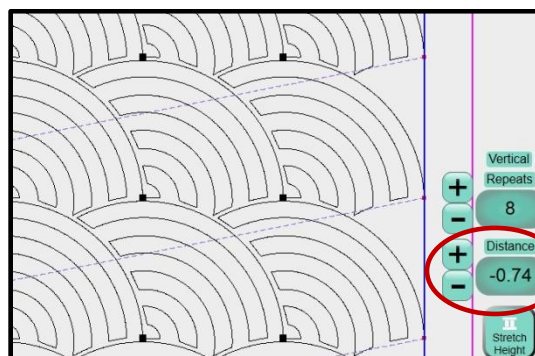


- Press **Wrapping**.

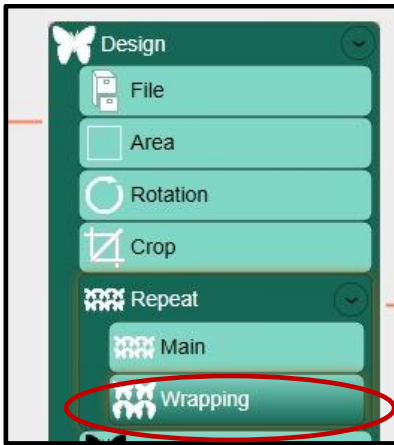

- Press the **Forward Window** button. This shifts the complete design to the right and wraps the design around on the left filling in the blank areas. Continue shifting until the start points are on the left edge of the area.




- Press the **Up** or **Down** buttons to adjust to your liking.

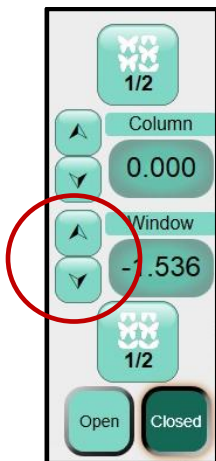

- Press **Baseline**.

- Press **Crop**.

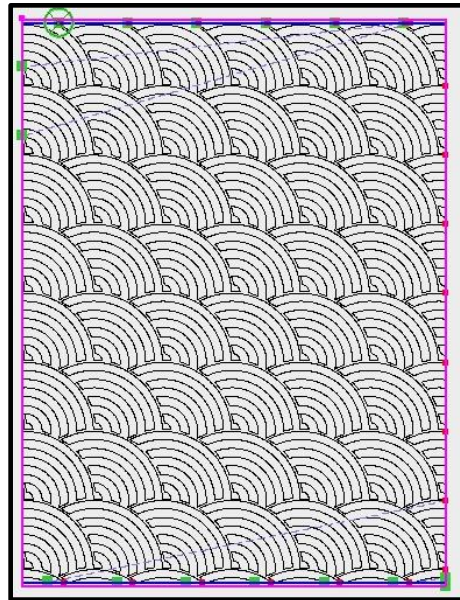

- Press **Outside**.
- Press **Closed**.
- The design is now wrapped from edge to edge and cropped to fit the area.
- Press **Quilt**.
- Press **Run**. Verify settings.
- Press **Proceed**.